

Garmin 5 EFS ADI

For Training Purposes Only

Current Heading Or Ground Track

Pitch Indicator

Airspeed

SRT Coordinator

Slip / Skid

Bank Indicator
10,20,30,45,60

Altitude

Vertical Speed Tape

To Brighten Display (after dark) ...

1) Push Power Button

2) Turn Knob clockwise to adjust Backlight

Power/Backlight, Ambient Light Sensor, microSD Card Slot, Knob

Note: Push Power Button after Aircraft Master is turned OFF to override 45 Second Automatic Shutdown sequence (from 45 Seconds to 3 Second)

The G5 PFD Page displays a horizon, airspeed, attitude, altitude, vertical speed, heading, and course deviation information. The following flight instruments and supplemental flight data are displayed on the PFD Page.

Figure 2-1 G5 PFD Flight Instruments

① Airspeed Indicator	⑨ Turn Rate Indicator	⑯ Selected Altitude
② Attitude Indicator	⑩ Altimeter Barometric Setting	⑰ Navigation Course
③ Pitch Scale	⑪ Selected Altitude Bug	⑱ Current Heading or Ground Track
④ Current Airspeed	⑫ Vertical Speed Indicator	⑲ Ground Track
⑤ Aircraft Symbol	⑬ Current Altitude	⑳ Heading or Ground Track
⑥ Course Deviation Indicator	⑭ VNAV Indicator or Vertical Deviation Indicator	㉑ Vspeed Reference
⑦ Slip/Skid Indicator	⑮ Altimeter	㉒ Battery Status Indicator
⑧ Ground Speed (GS)		